


ANNIVERSARY ZX
STRIPE APPLICATION INSTRUCTIONS

P/N: 99990-00916 black/grey
P/N: 99990-00917 black/gold

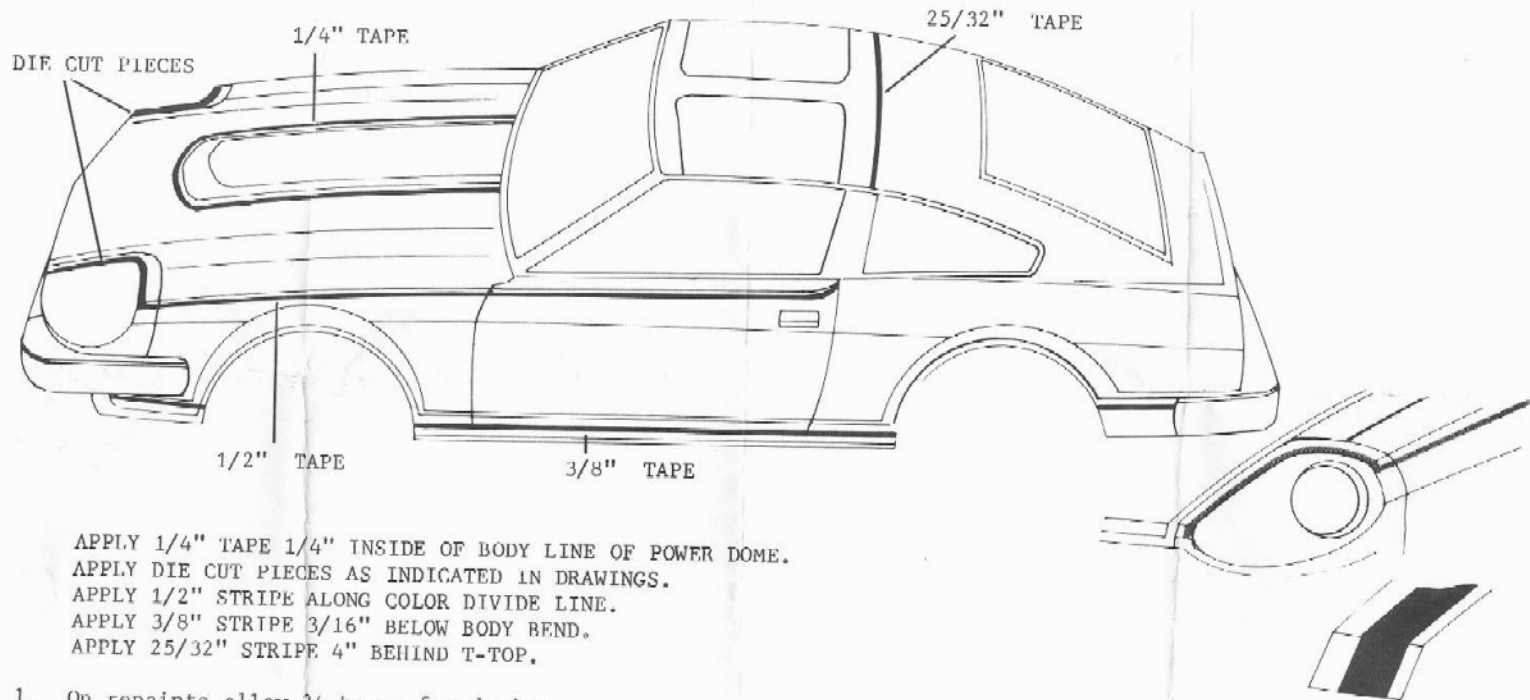

APPLY 1/4" TAPE 1/4" INSIDE OF BODY LINE OF POWER DOME.
APPLY DIE CUT PIECES AS INDICATED IN DRAWINGS.
APPLY 1/2" STRIPE ALONG COLOR DIVIDE LINE.
APPLY 3/8" STRIPE 3/16" BELOW BODY BEND.
APPLY 25/32" STRIPE 4" BEHIND T-TOP.

1. On repaints allow 24 hours for drying.
2. Room and vehicle temperature must be at least 60°F.
3. Clean surface of vehicle with 70% isopropyl alcohol.
4. Position striping on vehicle according to the above diagram.
5. Apply firm pressure to top of stripe during application.
6. Stripe pieces that must be connected, should be over-lapped at least 1/8". Make certain lower stripe is clean and the pre-mask tape is removed.
7. At all wrap areas, trim striping so that approximately 1/4" wrap remains.
8. Remove pre-mask tape by pulling back against itself at 180°. Soften wrap areas with a heat gun and then firmly press stripe into place.